


How to insert and release a Fleshlight case

OSR2 / SR6 · VESPERA Edition

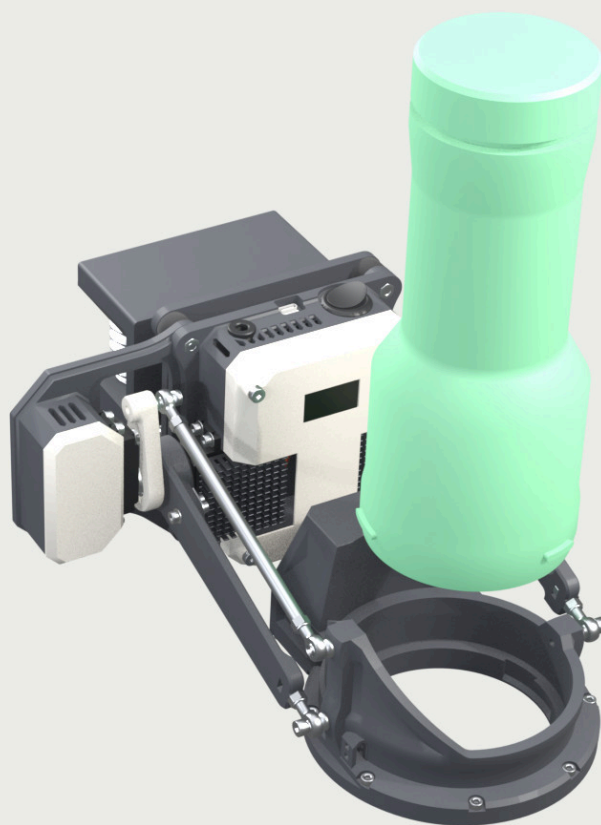

In this guide

- Steps 1 to 5: inserting the case.
- Steps 6 to 8: releasing it.


The parts

- **Tabs:** the three lugs near the wide end of the case.
- **Notches:** the three cut-outs in the top of the twist ring.
- **Clasp:** the spring finger in one of the notches. It holds a tab once the case is turned.
- **Extended tab:** the clasp's foot, under the ring. Pulling it back lets the case turn again.

1 Power the device on



2 Plug the ESP32 > power > on

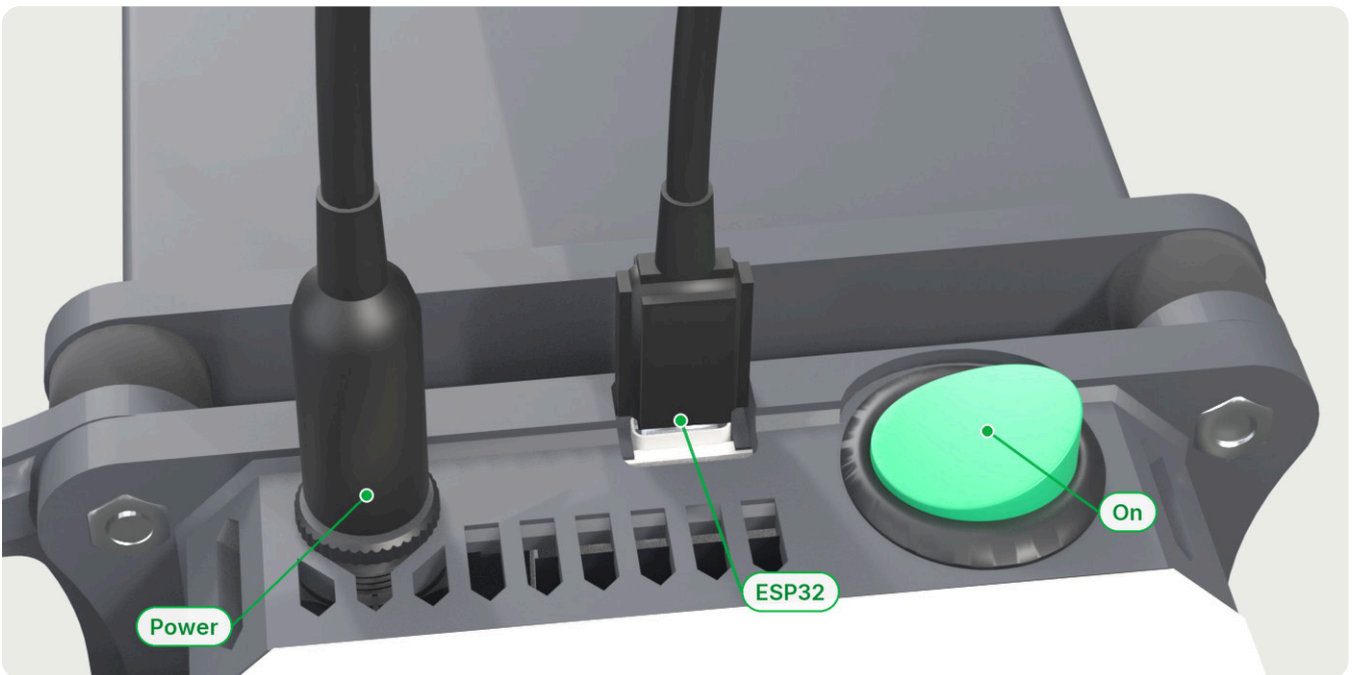

3

The device should have power, move to auto-home and stay sturdy.




Before




Auto-home

4

Align the case's tabs so they match the notches

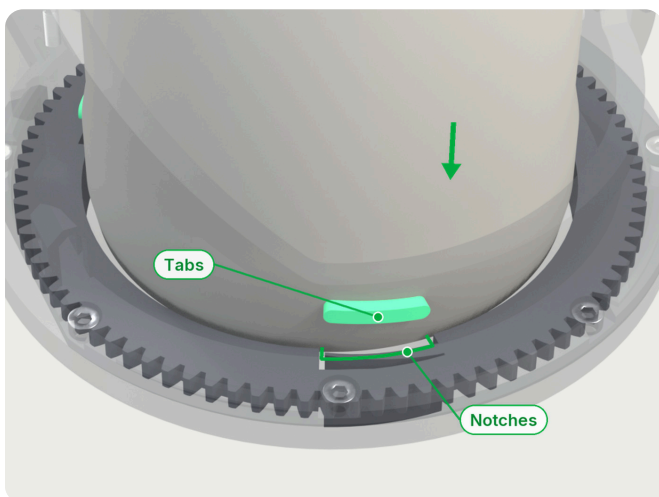


Tabs match the notches

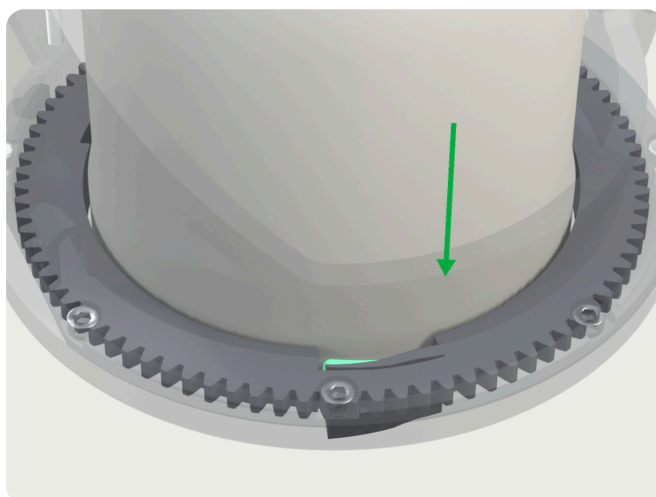


Gently push down until they are flush

- 5** Then rotate the case clockwise until it is held by the clasp.

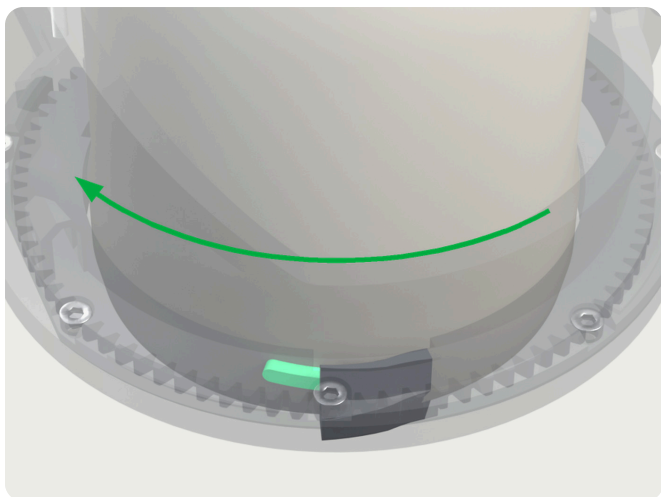


Clockwise

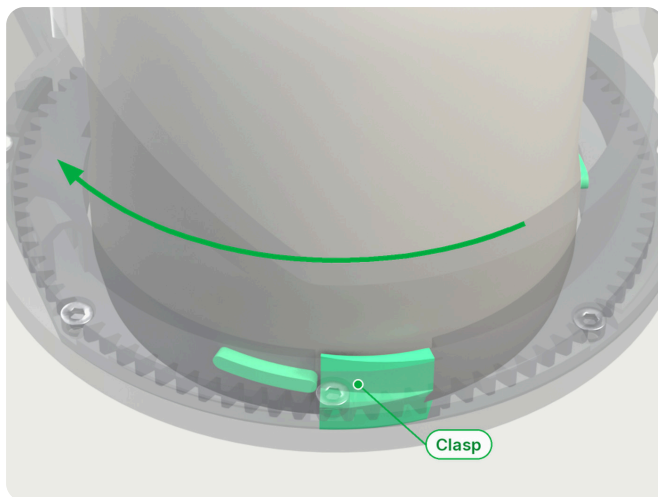


Held by the clasp

- 6** When removing the case, pull on the extended tab at the bottom.

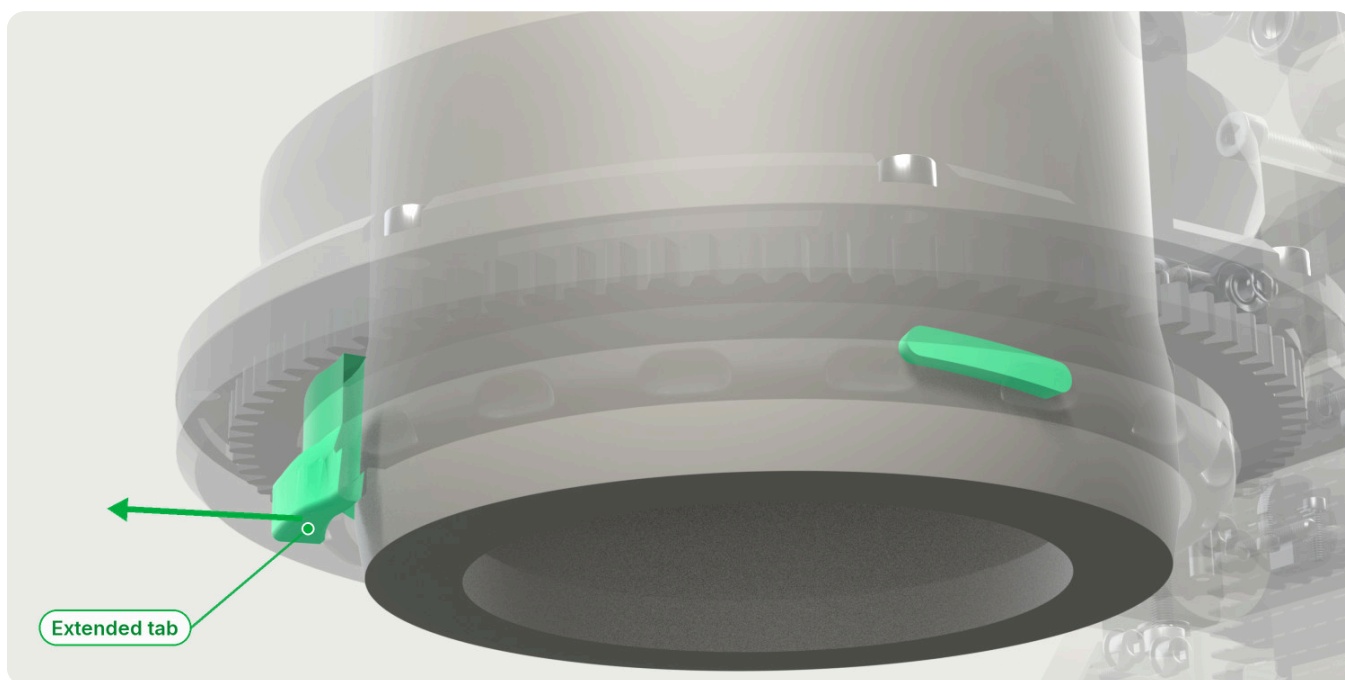


It's best that the device is on so the twist does not move around with you.

- 7** When you firmly have pulled it back and are gripping the receiver, rotate the case counter-clockwise.

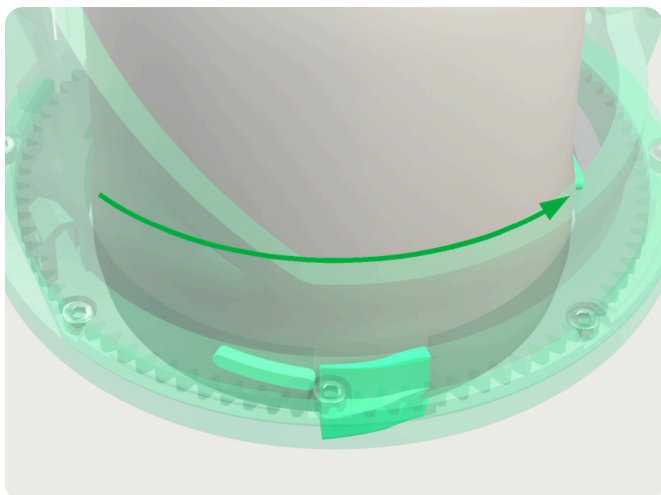

Gripping the receiver

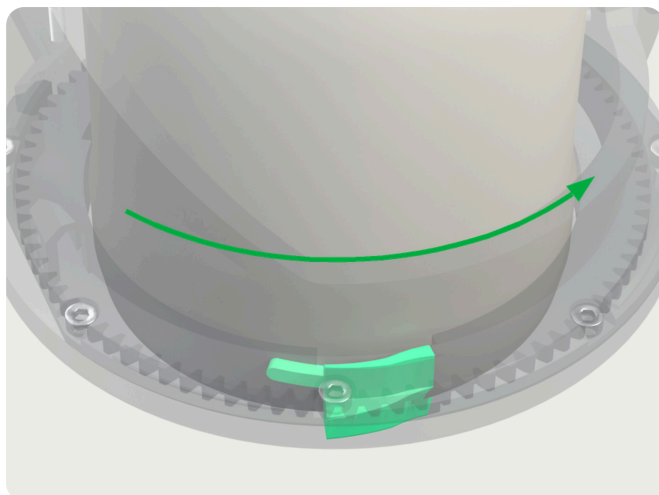

Counter-clockwise

- 8** Then remove the case.

